

FAQS. EVERYTHING ABOUT FENDT.

What can we do for you?

What makes Fendt Services different?

For us, service means knowing and understanding your work in order to meet your demands for reliability and safety and to act in your economic interest. We stand behind our products and have developed them for the highest demands and long-term operation. Our service is the partnership aspect for your work.

What is the Fendt one-terminal concept?

Just one terminal means: whether vehicle control, ISOBUS implement control, automated guidance via VarioGuide, documentation with VarioDoc, camera functions or various help functions – at Fendt everything is done easily using a terminal, the Fendt Varioterminal. Just one terminal also means that at Fendt, control is consistent and logical. Regardless of whether you drive a Fendt Vario, Fendt combine harvester or a Fendt Katana, you will see that you'll find your way around immediately and will feel at home on all Fendt machines.

How do I get a Variotronic^{TI} update?

Fendt Variotronic^{TI} is update-compatible. This means you always have the latest technology in your Fendt and the future on your terminal. Contact your Fendt dealer for details.

What is Fendt Expert?

Become an expert on the Vario Profi with Fendt Expert driver training: Are you already familiar with all the functions that the technology has to offer? Take advantage of the technology in every Fendt Vario and learn how to make best use of every feature, with Fendt Expert. Our team of professional trainers will advise you on how to use the full potential of your Fendt tractor. Contact your dealer for details and register today.

What is Fuse™?

Fuse™ Technologies provides ultra-modern precision solutions for agriculture across all AGCO brands. It permits farmers and contractors to integrate and connect their entire fleet seamlessly, resulting in reduced operating costs and even more efficient and profitable machine operations.

www.agcotecnologies.com

Contact Fendt.

fendt.com

Find everything online – from brochures to technical specifications, from reports about customers or our company to our Fendt event calendar.

Fendt Configurator

With the Fendt Vehicle Configurator, you can choose from all the available equipment variations and put together the optimally equipped machine for your farm. The Fendt Configurator is available online at www.fendt.com, where you will find a quick link to it directly on the start page.

fendt.tv

Fendt around the clock – our Fendt Media Library makes it possible. Our internet TV provides you with news and information about Fendt 24/7.

Test drives

"Go to fendt.com and select Demonstration Service on the Service page where you can register for a test drive of your preferred Fendt vehicle."

facebook.com/FendtGlobal

Follow us on Facebook and find out what's new in the Fendt world. Come have a look!

instagram.com/fendt.global

Follow us on Instagram and become a Fendt fan. Fascinating articles on Fendt are waiting for you there.

FENDT CARGO FRONT LOADER

Equipment variants and technical details.

	3X/65	3X/70	4X/75 compact	4X/75	4X/80	4X/85	5X/85	5X/90	
Technical Specifications									
Continuous lifting capacity	daN	1680	2000	1940	1940	2260	2600	2600	2950
Max. lift capacity	daN	1850	2190	2250	2250	2620	3000	3000	3460
Excavation height (tyre-dependent)	mm	3740	3740	4085	4155	4155	4150	4460	4460
Digging depth (tyre-dependent)	mm	210	60	220	150	150	130	250	250
Laying width (tyre-dependent)	mm	860	1030	1045	1145	1145	980	1080	1080
Laying width at height of 3.5 m (tyre-dependent)	mm	1170	1450	1585	1685	1685	1610	1910	1910
Additional equipment									
Quick-attach frame		■	■	■	■	■	■	■	■
Manual implement lock		■	■	■	■	■	■	■	■
Hydraulic attachment lock				□	□	□	□	□	□
Damping system da		□	□	□	□	□	□	□	□
Cargo-Lock (semi-automatic lock)		■	■	■	■	■	■	■	■
Synchronous tipping cylinder				■	■	■	■	■	■
Mechanical parallel guidance		■	■	■	■	■	■	■	■
Front guard		■	■	■	■	■	■	■	■
Level indicator		■	■	■	■	■	■	■	■
Pipe break failsafe (not with damping)		■	■	■	■	■	■	■	■
Lowering throttle valve		■	■	■	■	■	■	■	■
Load holding valve		■	■	■	■	■	■	■	■
3rd and 4th hydraulic working circuit		□	□	□	□	□	□	□	□
Multi-coupler front loader		■	■	■	■	■	■	■	■
Multi-coupler for 3rd and 4th circuit		□	□	□	□	□	□	□	□
CargoProfi functions									
CargoProfi controls integrated in Varioterminal					□	□		□	□
Weighing function: loads are weighed at the push of a button, both individual and overall weight possible					□	□		□	□
Memo function: save positions for arm and attachment					□	□		□	□
Limit the working range, such as lifting height and tilt angle					□	□		□	□
Shake function					□	□		□	□
End position damping					□	□		□	□
Speed-dependent damping (automatic enabling and disabling)					□	□		□	□
Tractor equipment									
Crossgate lever		■	■	■	■	■	■	■	■
Front window can be opened completely			■		■	■	■	■	■
Front loader assignment									
Fendt 200 Vario		□							
Fendt 300 Vario (up to max. tyre Ø 1200 mm)			□	□	□				
Fendt 300 Vario (from max. tyre Ø 1200 mm)				□	□				
Fendt 500 Vario					□	□			
Fendt 700 Vario (up to max. tyre Ø 1450 mm)							□	□	□
Fendt 700 Vario (from max. tyre Ø 1450 mm)								□	□

